



Transfer Case Lever Assemblies

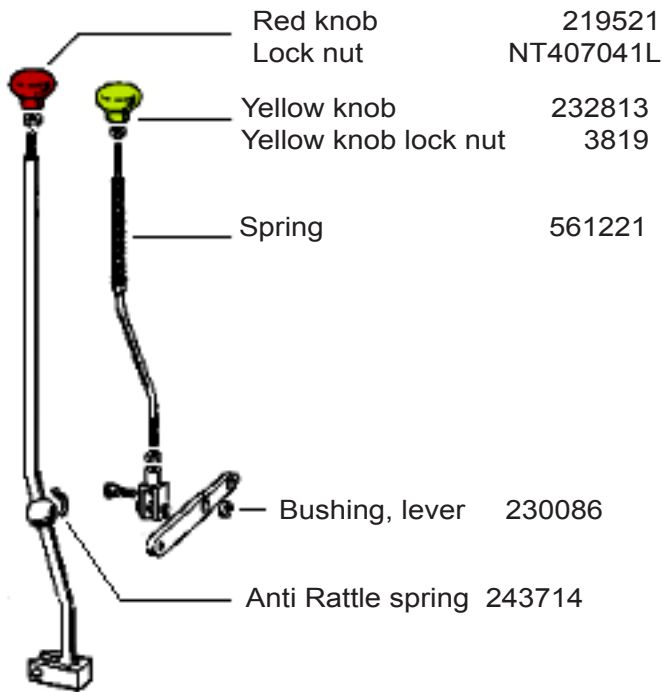

Detent spring, high - Low selector fork 56102

Speedometer Drive Assembly

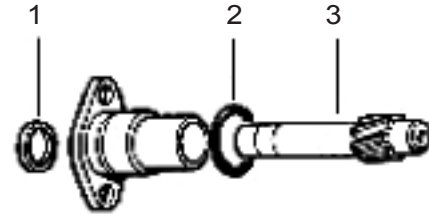


- | | |
|---|-------------|
| 1 Oil seal | 211502 |
| 2 O-ring | 267828 |
| 3 Speedometer pinion gear | FRC1536 |
| Retaining ring (Series II, IIA) | 232566 |
| (clamps speedometer cable to drive housing) | |
| Screw, secures retaining ring (3 req) | 78924 |
| Speedometer cables | See page 50 |

Gasket set (does not include oil seals)

Transmission and transfer case 600603

Rear Transfer Case Housing Assembly

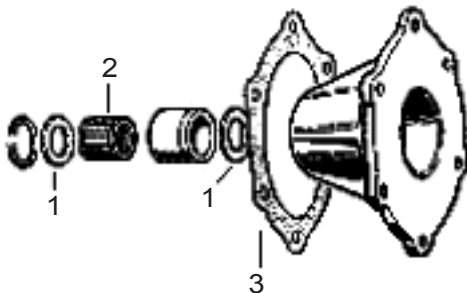

- | | |
|----------------------------|--------|
| 1 Retaining washer (2 req) | 217523 |
| 2 Bearing, rear main shaft | 217478 |
| 3 Gasket | 622047 |

Oil Seals

Transmission

- | | |
|--|----------|
| Input shaft oil seal (Ser. III only) | 571059 |
| Transmission to transfer case seal (all) | 236305 |
| Cross shaft seal (Ser. II, IIA) | 90214787 |
| (cross shaft activates throw out bearing fork) | |
| Boot for cross shaft (Ser. II, IIA) | 553262 |
| (seals cross shaft to bell housing) | |

Transfer case

- | | |
|--|---------|
| Output shaft seal, front & rear | FRC1780 |
| Intermediate shaft O-ring, Suffix B & on | 532323 |
| Speedometer O-ring | 267828 |
| Speedometer oil seal | 211502 |

Transmission mounts

NRC2054