



### Radiator & Fittings

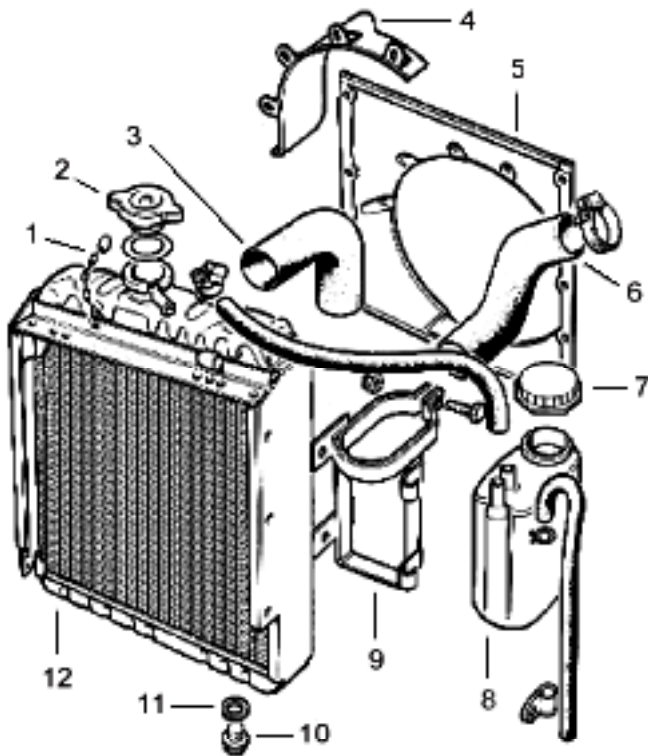

- |   |           |
|---|-----------|
| 1 Chain, cap                              | 509769    |
| 2 Pressure cap (late style)               | STC4735   |
| 3 Top hose, early style through 69        | 569955    |
| Top hose, narrow top late style           | 577346    |
| 4 Shield, splash                          | 551714    |
| Screw, shield mounting (4 req)            | AB610055  |
| Washer for screws (4 req)                 | WS600047L |
| 5 Shroud, fan, for late radiator          | NRC9494   |
| fan shroud screw (9 req)                  | 562979    |
| 6 Bottom hose, early style through 69     | 569956    |
| Bottom hose, narrow top late style        | NRC3115   |
| 7 Cap, coolant recovery bottle            | 564719    |
| 8 Coolant recovery bottle                 | 564718    |
| 9 Bracket, coolant recovery bottle        | 598531    |
| 10 Drain plug                             | 569047    |
| 11 Washer, drain plug                     | 213959    |
| 12 Radiator, early wide 4.25 wide style   | NLA       |
| (use late style with late hoses & shroud) |           |
| Radiator, Late IIA, III narrow tank       | 577609    |

### Fuel Pump

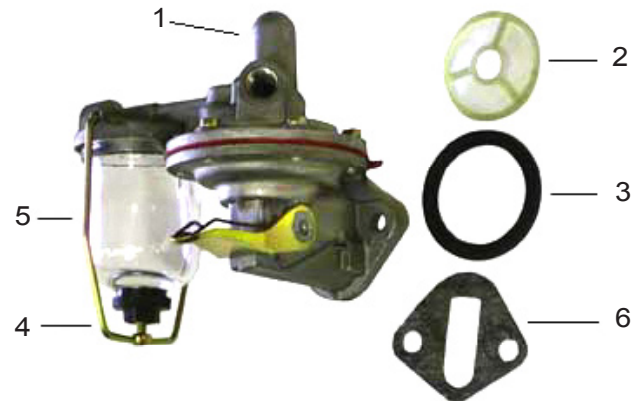

- |   |          |
|---|----------|
| 1 Fuel pump, replica AC type                    | 549761   |
| (identical to original, including primer lever) |          |
| Rebuild kit (Ser. II, IIA, III)                 | AEU2760  |
| (fits original AC and AC replica above)         |          |
| 2 Screen, filter                                | 500419   |
| 3 Gasket, sediment bowl                         | 27H1330L |
| 4 Retainer, sediment bowl                       | 108771   |
| 5 Sediment bowl                                 | 236891   |
| 6 Gasket  | 275565   |

### Tech Tip

#### Fuel pump spares for trips

The AC fuel pumps supplied by Land Rover are very rugged reliable units that very seldom have problems. If a problem occurs they can be quickly gone through while still on the motor with a rebuild kit.

If you are refilling fuel from Jerrycans, you may pick up enough particulates to fill the sediment bowl or clog the filter. The rubber sediment bowl gasket hardens over time and will never reseal once hardened. Always bring a new spare filter screen and sediment bowl gasket any time you go on a trip where you may encounter dirty or contaminated fuel. They are inexpensive, take almost no space and you will be in a world of hurt without one if you need to clean the sediment bowl.